



ANC-4000_1 Acoustical Ceiling Panels


1. LAY OUT THE PANEL LOCATION.

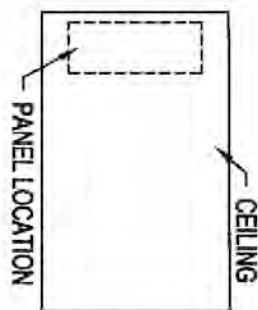


3. SECURE THE EC-2 BRACKET / EC-4 BAR TO THE CEILING WITH SCREWS.

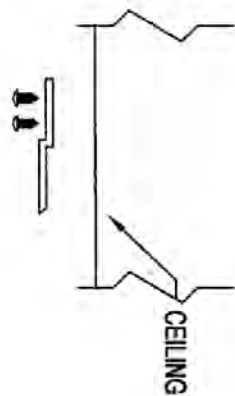

2. DETERMINE EC-2 BRACKET / EC-4 BAR LOCATIONS ON WALL TO LINE UP WITH EC-1 BRACKET LOCATIONS ON PANELS.

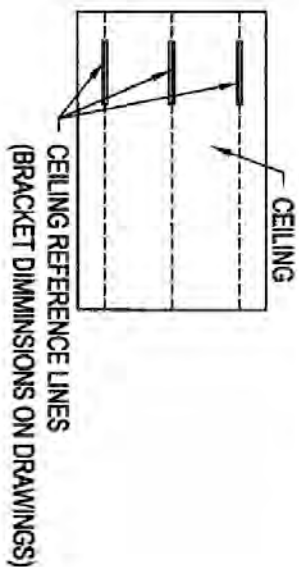

4. SLIDE THE EC-1 BRACKETS ON THE PANELS ONTO THE EC-2 / EC-4 BARS ON THE CEILING.

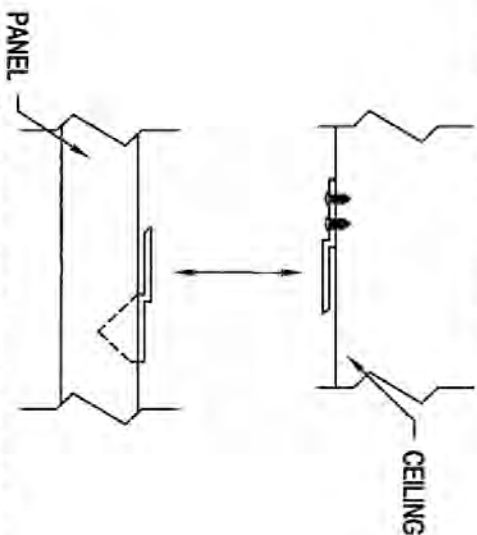

*APPLY A SMALL AMOUNT OF ADHESIVE ON BOTH PARTS OF THE BRACKETS. THEN SLIDE BRACKET TOGETHER