


# EC-Bracket with VELCRO DOTS mounting detail


1. Lay out the panel location.



2. Determine EC-1 bracket or EC-2 / EC-4 bar locations on wall to line up with EC-1 bracket locations on panels.

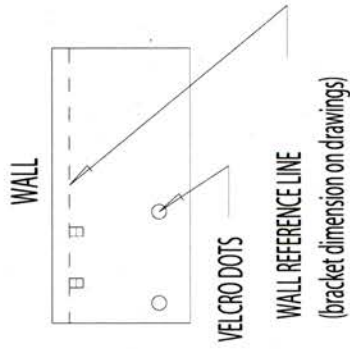


3. Secure the EC-1 bracket or EC-2 / EC-4 bar to the wall with 2 screws.

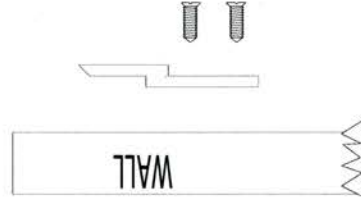


5. Peel off the paper backing to reveal the PSA.




6. Slide the EC-1 brackets on the panels onto the EC-1 brackets or EC-2 / EC-4 bars on the wall.

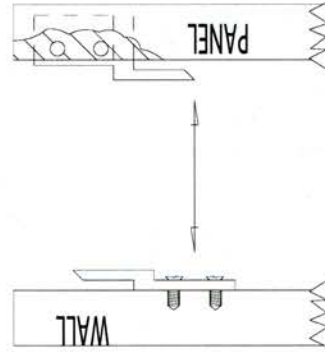

7. In the vicinity of the velcro dots push the panel firmly onto the wall.

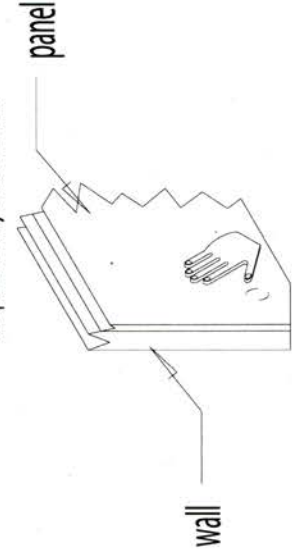

4. Attach the hook velcro dots, with PSA, to the pile velcro dots on the panels.

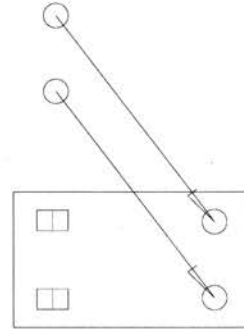

\* For all ceilings, apply a small amount of adhesive (ie LIQUID NAILS) on both parts of brackets. Slide brackets together.