



IMPALING CLIP mounting detail

- 1.** Lay out the panel location.

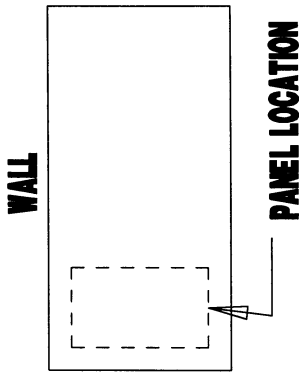


- 2.** Secure impaling clip to wall using two screws per clip.


* (toggle anchors may be needed on concrete walls)

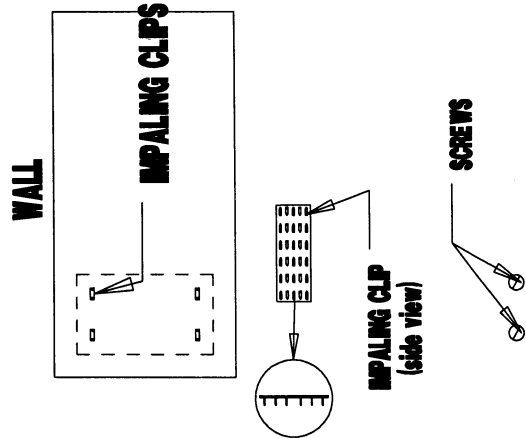


- 3.** Apply a generous amount of liquid nail or construction adhesive to clip.

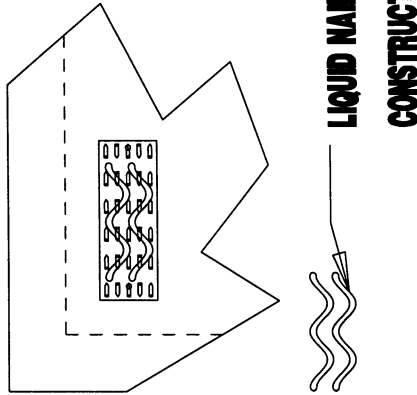

- 5.** Press panel firmly to wall.
* (Make sure that the fiberglass core is being impaled and not the fabric.)

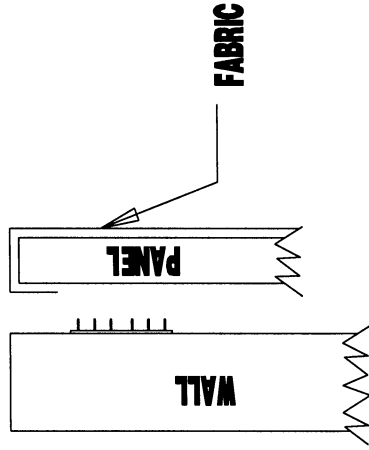

- 4.** APPLY ADDITIONAL ADHESIVE TO BACK OF PANEL IN A RANDOM PATTERN.

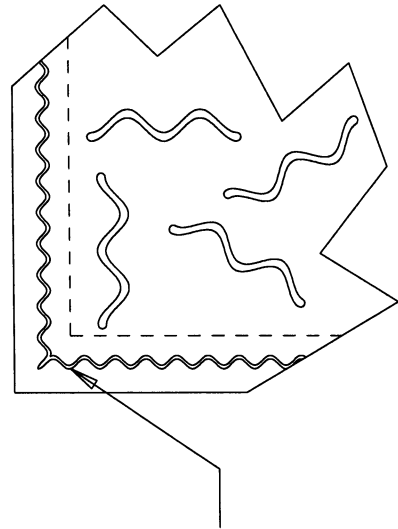

BEST TO PLACE A SMALL BEAD OF ADHESIVE ON FABRIC AND PRESS TO WALL FOR PERMANENT INSTALLATION.

- 6.** Clean up with soapy warm water if needed.

