



A  
B

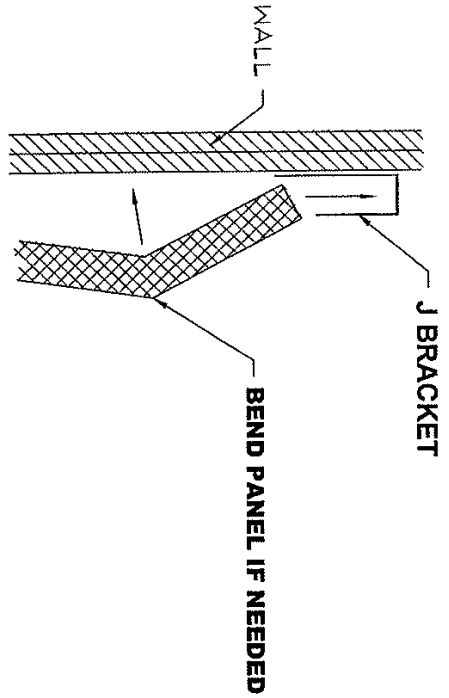

C

1. Layout and mark panel locations
2. Attach brackets to wall with mechanical fasteners. Use construction adhesive for a more secure installation.
- To install panels either slide panels in from side, or insert into lower brackets first and bend into upper bracket
4. Additional brackets may be used on sides of large panels

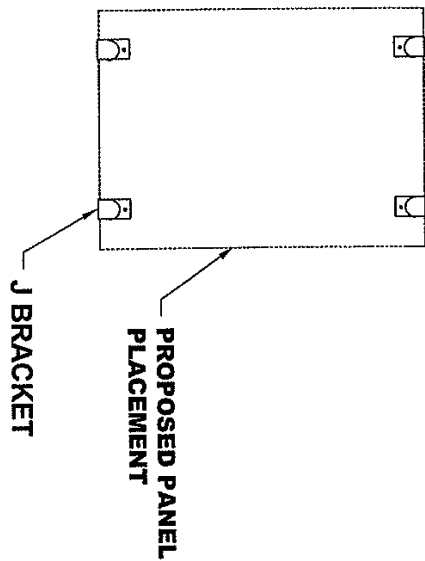

**ULTRA INSTALLATION INSTRUCTIONS**  
**J BRACKET METHOD**



DWG#: SS-ULJ408