




"FINISHING FIELD CUTS ON BSC AND QFA PRODUCTS"

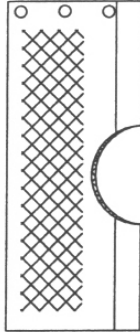

1) CUT PANELS WITH UTILITY KNIFE OR SHEARS TO FIT AS SNUG AS POSSIBLE. KEEP GAPS TO A MINIMUM.

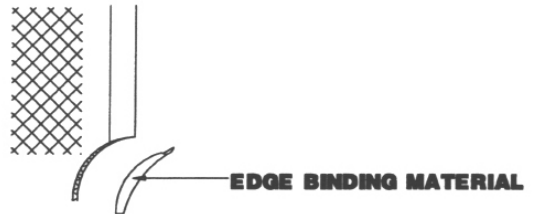

2) FOLD EDGE BINDING MATERIAL OVER EDGES, EQUAL AMOUNTS ON FRONT AND BACK

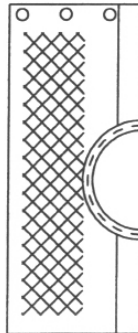

3) STAPLE BIND EDGE BINDING MATERIAL TO PANEL, WITH STAPLES EVERY 2-3 INCHES.