



ACOUSTICAL CEILING PANELS

# ANC-4000\_1 Acoustical Ceiling Panels


1. LAY OUT THE PANEL LOCATION

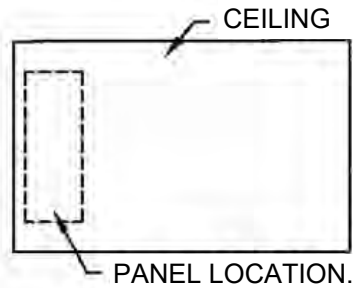


2. DETERMINE EC-2 BRACKET / EC-4 BAR LOCATIONS ON WALL TO LINE UP WITH EC-1 BRACKET LOCATIONS ON PANELS.

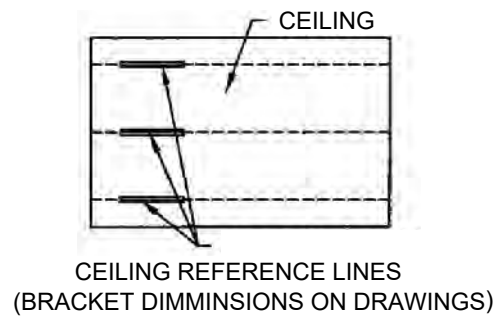

3. SECURE THE EC-2 BRACKET / EC-4 BAR TO THE CEILING WITH SCREWS

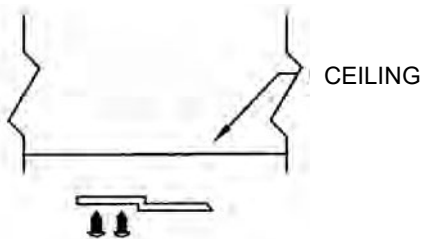

4. SLIDE THE EC-1 BRACKETS ON THE PANELS ONTO THE EC-2 / EC-4 BARS ON THE CEILING.

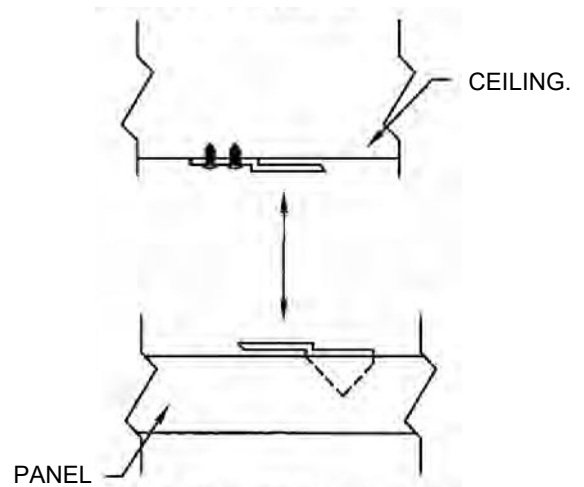

*\*APPLY A SMALL AMOUNT OF ADHESIVE ON BOTH PARTS OF THE BRACKETS. THEN SLIDE BRACKET TOGETHER*