



IMPALING CLIP MOUNTING DETAIL


1. Lay out the panel location.
WALL

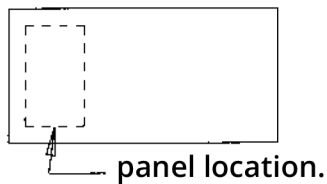


3. Apply a generous amount of liquid nail or construction adhesive to clip.

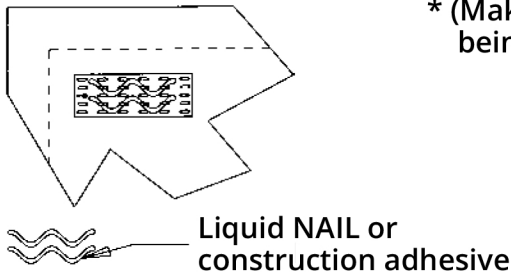

5. press panel firmly to wall.
* (Make sure that the fiberglass core is being implaed and note the fabric.)

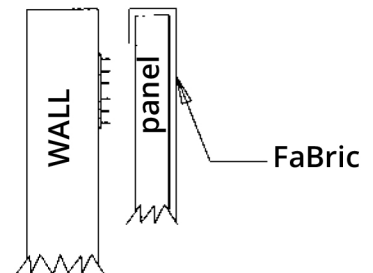

2. Secure impaling clip to wall using two screws per clip.(toggle anchors may be needed on concrete walls)

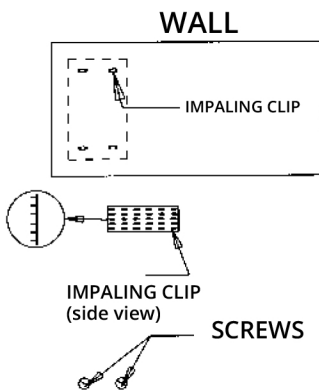

4. Apply additional adhesive to back of panel in a random pattern.

